



## ECO BEAUTY ROLLS - FITTING INSTRUCTIONS

---

### REQUIREMENTS

- 1.The ECO BEAUTY flooring is better to be installed by a professional installer.
- 2.The sub-flooring should be clean,dry and no cracks.
- 3.The best installation temperature must be higher than 15 centi-degree and the relative humidity not higher than 80%.A room temperature between 18°C (65°F) and 25°C (77°F).


### PREPARATIONS

- 1.Cutting tools: Shovel/Safety knife/Cutting knife/Trowel
- 2.Cleaning tools:Vacuum/Mop cloth/Shoe cover/Mop/Broom
- 3.Glue:PVC glue/Cold welding liquid
- 4.Other tools:Sand/Heavy roller/Carpenter's ink market/floor rule/Scotch tape


### INSTRUCTIONS

- 1.Apply afterwards a self leveling compound, 24 hours prior to installation. This compound is then grinded and vacuum cleaned. Take heed, depending on the construction of the floor, of the allowed residual humidity and possible rising moisture.
- 2.Roll the ECO BEAUTY floor covering out, overlapping for about 5 cm and leave 24 hours to acclimatize. As P1
- 3.Fold the back over half of their length (or width) draw a mark as start for the PVC glue application.Lay the ECO BEAUTY flooring on the wet glue and use the heavy roller to remove all air bubbles.
- 4.Use the cold welding liquid to to weld the seams,before that must put the scotch tape on the carpet,cut the tape using the seam.Then fitting the seam by cold welding liquid.As P2

P1

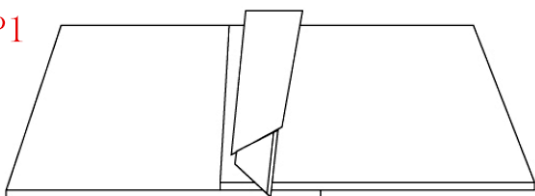

P2

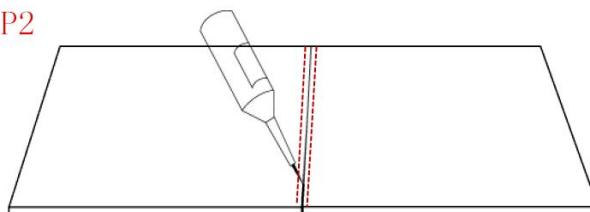

- 5.After some minutes,move the tape and check the result.